
 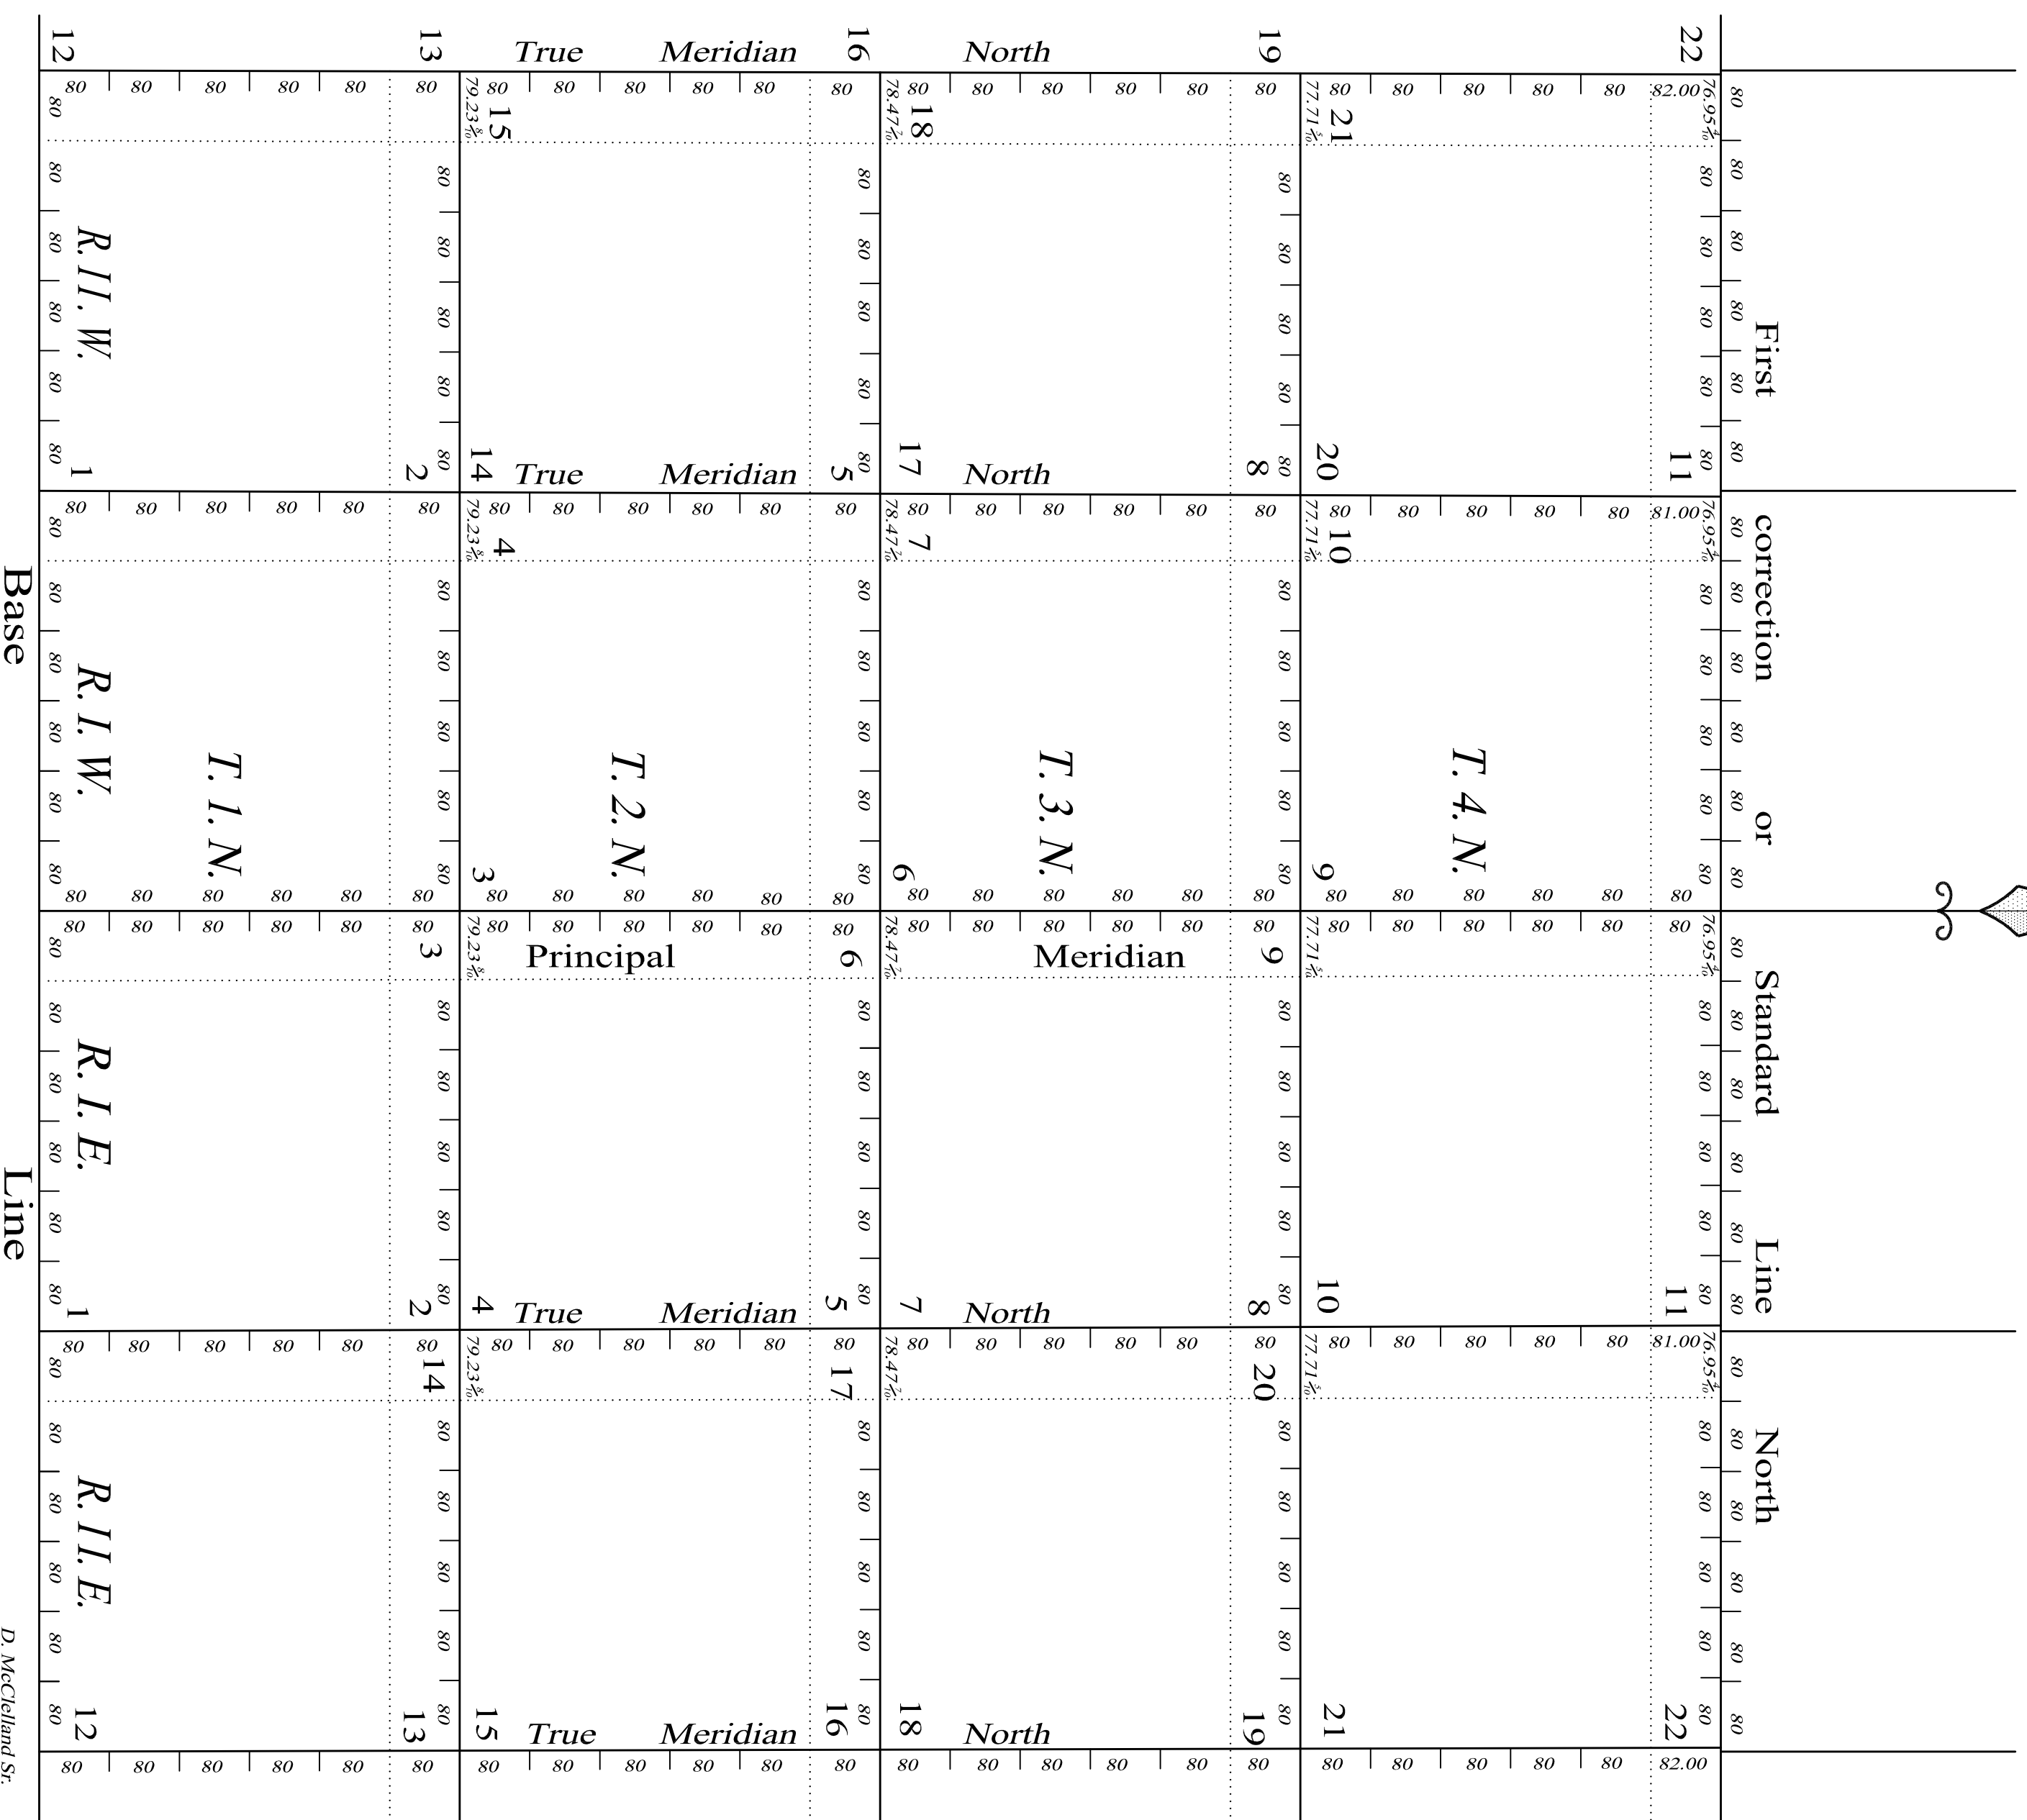


Diagram A.

EXTERIORS OR TOWNSHIP LINES.



D. McClelland Sr.

The upright figures (made thus 1.2.3) commencing near the Principal Meridian and Base line with No. 1, indicate the perambulations of the Surveyor in running the Townships and Correction lines. The Correction or Standard lines North of the Base are every 4 townships, and South of the Base every 5 townships. The excess or deficiency of measurement on northern and southern boundaries is thrown on the westernmost half mile. The measurements between Meridian lines will, of course, always vary according to the latitude of the survey, besides being liable to be rendered inexact where the country is very hilly or broken. The convergence of the range lines as shown by the measurements on this diagram, is according to calculation, as it exists between the parallels of 46° and 47° N.L.